

## HANDS-FREE MOP ATTACHMENT AND MOP DROP



- 1. Add a stack of mops to the mop bucket.
  - If using a stainless steel mop bucket, ensure that the arched insert is already in place.



2. At the back of the cart, place the mop frame tab against the bracket and use gentle leverage to collapse the frame.



3. At the front of the cart, insert the mop frame into the mop pockets. Press the frame until it is locked.



4. To remove a dirty mop, simply repeat step number two. Ensure that a plastic garbage bag is already in place to catch the dirty mop.

## MODULAR DESIGN

Saturix cleaning carts are designed for flexible configuration, maximum storage space, and complete upgradability.



Upgrade HC102 and HC202 carts to all stainless steel buckets.



Each cart is compatible with our Precision Dosing System or Charging Bucket System.



All carts offer seamless integration with Saturix handles and frames.

Our stainless steel wipes tub accommodates a full, unfolded stack of wipes.

Available for purchase as an add-on to cart model HC102.



1. Place an empty wipes tub inside the frame and insert the longer left-hand tab first.



2. Rotate the wipes tub and gently lift to insert the shorter right-hand tab.



3. Add wipes.

To learn more about our products, visit us online at Saturix.com or contact us at +1 (413) 598-8344 or info@saturix.com.





## **HOW-TO AND BEST PRACTICES**
















- 1. Ensure that the appropriate piston is inserted into the cleaning solution tank.
  - · The piston size determines the amount of liquid that enters the dosing tray.
  - · A 250ml piston is included in the HC202 and HC202A cart.
  - · Please refer to the chart at the bottom for piston selection.
- 2. Add a stack of up to 10 Saturix mops, pockets facing up, and add the appropriate amount of cleaning solution to the tank.
  - · Refer to the table on the the next page for the amount of cleaning solution to use.
- 3. Fully depress the lever with a bare mop frame to prime the dosing tray. You only need to do this once.
- 4. Apply a clean mop to the mop frame. Depress the lever and hold for full saturation (typically three to five seconds). Every time the level is lifted up, liquid will be released.
- 5. Remove the dirty mop and repeat step four as needed. Remember, never re-saturate a mop that is not absolutely clean.
- 6. To stop the Precision Dosing System, lift up the lever to remove it and place it in the storage slot. Use the last clean mop of the shift to soak up the remaining cleaning solution in the tray.
- 7. As long as the lid is sealed, the excess cleaning solution can be safely stored in the storage tank for up to one week.



Saturix Mop	SKU Number	Piston Size	Floor Coverage per Mop
Heavy Weight Disposable Microfiber Mops	MD416, MD416S	250 ml	305 ft² / 27 m²
Medium Weight Disposable Microfiber Mops	MD316, MD316S	200 ml	228 ft <sup>2</sup> / 20 m <sup>2</sup>
Light Weight Disposable Microfiber Mops	MD216, MD216S	130 ml	158 ft² / 14 m²
Reusable Microfiber Mops	MR816, MR816A	400 ml	222 ft <sup>2</sup> / 20 m <sup>2</sup>

To learn more about our products, visit us online at Saturix.com or contact us at +1 (413) 598-8344 or info@saturix.com.




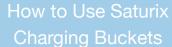








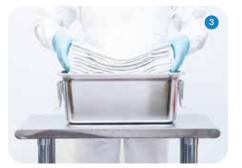



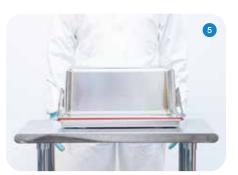



Saturix Mop	SKU Number	Cleaning Solution per Mop	Floor Coverage per Mop
Heavy Weight Disposable Microfiber Mops	MD416, MD416S	250 ml	305 ft <sup>2</sup> / 27 m <sup>2</sup>
Medium Weight Disposable Microfiber Mops	MD316, MD316S	200 ml	228 ft <sup>2</sup> / 20 m <sup>2</sup>
Light Weight Disposable Microfiber Mops	MD216, MD216S	130 ml	158 ft² / 14 m²
Reusable Microfiber Mops	MR816, MR816A	400 ml	222 ft² / 20 m²

- For Stainless Steel Charging Buckets, place the Arched Insert in the bucket.
- Determine the appropriate volume of cleaning solution per mop load and pour it into the charging bucket.
  - The table below is a starting guide, test what works best for you.
  - The correct volume of solution will provide maximum coverage with virtually no liquid waste.
- 3. Insert the appropriate number of mops (up to 10 mops) with the pockets facing up.
- 4. For Stainless Steel Charging Buckets, secure the two latches to create a seal.
  - For Plastic Charging Buckets, press all four tabs until you hear an audible click.
- 5. Turn the bucket upside down and wait 5 to 10 minutes for saturation.
- 6. Turn the bucket over, remove the lid and use.

## TIPS TO ENHANCE EFFICIENCY AND OUTCOMES

For Plastic Charging Buckets, clean with IPA after use and store dry.

For **Stainless Steel Charging Buckets**, ensure they are dried after use.

- If you use a chlorine-based cleaning solution, clean the bucket with water and dry with wipes.
- Check the rubber gasket on the Stainless Steel Charging Bucket after 50 auto-clave cycles.

**Either type of bucket** can be used alone for cleanrooms and critical environments that have space constraints.

